

CHASSIS LIFT SYSTEM

Demountable Concepts has upgraded the chassis lift system's controller with a security code feature, a low voltage detector, and auto shutoff. These new features add another layer of safety and security for our customers. Please review the new controller's operating instructions below.

Demountable Concepts Low Voltage Controller with Cycle Counter



IMPORTANT: This information is to be delivered to truck owner and operator.



1. Enable the controller by entering the security code. Press the keys in the following order: **A, B, A, B**.

2. The green LED light will light, indicating that the controller is ready. Note that when the "A" and "B" keys are being pressed, the red "POWER ON" LED will light.



3. Operate the chassis lift by pressing the "UP" or "DOWN" button as necessary.

4. Controller will turn off after 20 minutes of non-activity. If this happens, simply re-enter the security code (See #1). To prevent unauthorized use, or clear an incorrect security code, disable the controller immediately by pressing "A" and "B" at the same time until the green light goes off.




5. If the truck battery is running low, the controller may go into a "LOW BATTERY" state.

- If so, the "LOW BAT." LED will begin flashing.
- The chassis lift can be operated for only two more cycles.
- An alarm will sound while raising or lowering.
- After two lifts, the chassis lift can be raised only, and cannot be lowered until the low voltage condition is corrected.



6. The chassis lift lock alarm inside the cab will continue to sound after the truck is turned off. **If the truck is to be parked for an extended period of time, lock the chassis lift hooks.**

7. The switch for the chassis mounted flood lights is a small red button next to the alarm inside the cab. The button will illuminate while the flood lights are on.

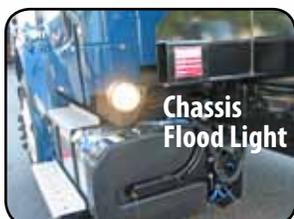

PLEASE CONTACT US WITH ANY QUESTIONS

Call: 800-254-3643 — Visit: www.demount.com