

Demountable Trailer Maintenance Check List

NOTE ~ Trailer maintenance to be done with chassis only with no bodies attached.

NOTE ~ This check list is in additon to stardard trailer mainenance procedures.

Locking Hooks

- Check measurements of front hooks
- Check measurements of rear hooks
- Adjust front and rear hooks as required
- Grease all locking shafts on the trailer
- Grease locking lever at locking pin
- Check that locking lever is in good working order

Body Divider

- Check that body dividers work smoothly
- Grease body divider with spray lithium grease
- Check body divider pins

Electrical

- Check all trailer lights
- Check light plug front and rear
- Clean front trailer 7-way connector

Air Lift System Trailer and Tractor

- Check that air controls work smoothly
- Check condition of air springs (air bags)
- Check condition of shock absorbers
- Check that PSI on regulator is not over 100 psi
- Cycle air system up, down and ride
- Check all air lines and fittings for leaks or wear
- Check for loose nuts and bolts
- Drain air tanks to remove water

Any questions contact please contact our customer service at:

Toll free 800.254.3643

Email service@demount.com